
GUITAR MANIA

Guitar Controller Setup and Usage Instructions

Congratulations on your purchase of a Guitar Mania Guitar Controller! Please read the following instructions carefully before attempting to use the controller.

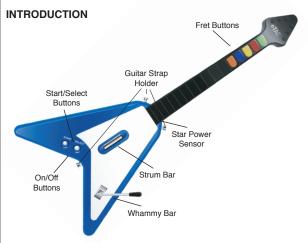

- *The actual style of the guitar controller may be different from the example shown above.
- · START button : Pause
- · SELECT button · Activate Star Power
- · GREEN button: Activate the Green note / Confirm
- RED button : Activate the Red note / Cancel
- · YELLOW button : Activate the Yellow note
- · BLUE button : Activate the Blue note
- · ORANGE button : Activate the Orange note
- STRUM BAR : Move the Strum Bar up or down to activate the color buttons and to navigate the menu
- · Whammy Bar : Press the bar down to alter the sound of the song
- Tilt Sensor: Located inside the casing at the base of the neck. It is used to activate the Star Power. To activate, tilt the neck of the controller up or down.

FOR THE WIRED CONTROLLER

Step 1. Connect the PS2 connector on the guitar to the controller port 1 or 2 of your Sony PlayStation 2 console and start the game.

FOR THE WIRELESS CONTROLLER

- Step 1. Use the screwdriver that came with box to unscrew the screw to install 4 AA batteries on the guitar controller
- Step 2. Connect the wireless receiver to the controller port 1 or 2 of your Sony PlayStation 2 console
- Step 3. Turn on the guitar controller. The on/off button is located next to the start/select button on the side of the guitar.
- Step 4. Turn the game on. Once both the console and the guitar controller is on, the AutoSenseTM technology will automatically detect the presence of the guitar controller
- Step 5. When the LED on the wireless receiver stops blinking and turns solid, the controller and receiver are connected and ready for the game. Also, a blue light will be lit where the strum bar is located.

FOR THE V CONTROLLER STRAP

- Step 1. Attach 1 end of the strap to the center holder.
- Step 2. Attach the 2nd end of the strap to the bottom holder.
- Step 3. See illustration



Please refer to the Guitar Hero manual for further instructions.

WARRANTY

 This product comes with three (3) months of warranty from the date of purchase against manufacturing defect.

For further information on the warranty and to activate the warranty, please register the product at http://www.theantcommandos.com/warranty.

NOTICE

- · This product is made for indoor use only.
- Keep the product at room temperature.
- · Product contains electrical components; please keep it away from moisture.
- · Modifying or disassembling the controller in any way will void the warranty.
- The controller must be used with care to avoid injury. TAC will not be liable for injury resulting from the improper use of the controller.
- Do not use any chemical compound to clean the product.

